

Two Way Adjustable Reverse Sensor / ERD

CAUTION! 

Only a qualified service technician must make all adjustments to the sensor

The Eagle Diamond Control Board has two separate posts for adjusting sensitivity. One is for opening the gate, and the other is for closing the gate.



IMPORTANT

The level of sensitivity has to do with the weight of the gate and the conditions of the installation.



There is an OVERLOAD LED warning that will light up when gate is heavier than normal for the operator. During this warning, the operator will not function properly.

When Adjusting Sensors Remember...

Too Sensitive if the gate stops or reverses by itself

Not Sensitive enough if the gate strikes an object and does not stop or reverse

